



## INSTALLATION INSTRUCTIONS

Progress Technology Front Anti-Sway Bar

2005 Subaru Legacy / 2008 WRX

Part #61.2320

No Revision (05/25/05)


### WHO SHOULD INSTALL THIS PRODUCT?

Progress Technology products should only be installed by a qualified licensed mechanic experienced in the installation and removal of suspension components. Please read instructions from start to finish and verify the parts in the parts list before beginning installation.

### Parts List

Description	Quantity
Sway Bar	1
Bushing	2
u-Bracket	2
Lube	1

1. Park vehicle on a smooth, level, asphalt or concrete surface. Block rear wheels. Jack up front end of car and support with jack stands. Remove front wheels and tires. Remove stock (OEM) sway bar and brackets. Leave the end link attached to the lower control arm.
2. Locate the pivot "D shaped" polyurethane bushings and tube of special grease supplied in the hardware kit. Cut the end off the grease tube and apply the grease to the bore of the polyurethane bushings (in the hole). Open the bushings and snap them over the new Anti-roll Bar, as positioned on the stock bar. Tighten the mounting bolts.

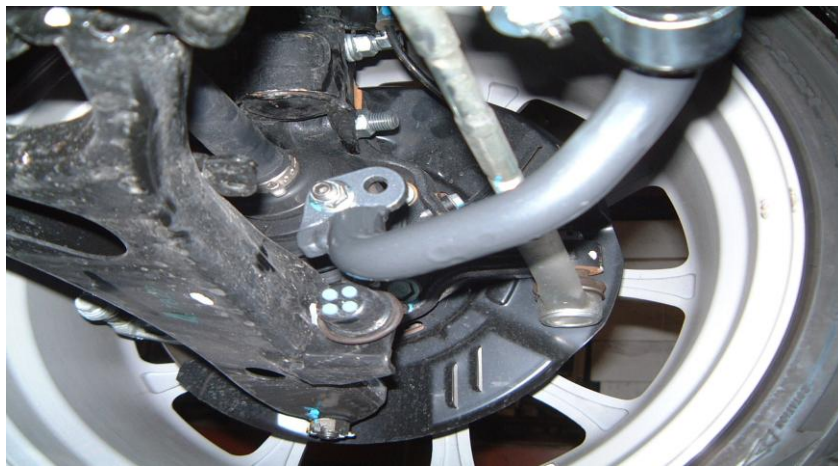

View of driver side

3. Attach the end links to the bar. The hole toward the rear of the car is the stiffest setting.

4. Install wheels and tires. Lower the front of car onto ground, and roll car back and forth to settle suspension.
5. Installation is complete. Check assembly periodically for tightness.

**Thank you for choosing Progress products. For additional product and technical information, visit our website.**