



## INSTALLATION INSTRUCTIONS

Rear Anti-Sway Bar  
Scion FR-S / Subaru BRZ  
Part # 62.2135  
No Revision, 3/8/13

**WHO SHOULD INSTALL THIS PRODUCT?** Progress Technology products should only be installed by a qualified licensed mechanic experienced in the installation and removal of suspension components. Please read instructions from start to finish and verify the parts in the parts list before beginning installation.

### Parts List


Description	Quantity	Description	Quantity
17mm Sway Bar	1	Reinforcement Plate	2
Bushing	2	M10-1.50 x 20 Flange Head Bolt	2
Lube	1	M10-1.50 Flange Nut	2

**\*\* Changing the settings and using this bar will change the handling characteristics of the vehicle. Use caution when driving after installation of any product made to modify performance. \*\***

1. Park vehicle on a smooth, level, asphalt or concrete surface. Block front wheels. Jack up rear end of car and support with jack stands or if using a lift refer to the owner's manual for proper lift locations.
2. Remove the nuts that hold the end link to the bar (Figure 1). Next, remove the factory bushings and brackets. **Retain** both brackets, hardware and end link nuts for installation (Figure 2). Remove the bar from the vehicle.



(Figure 1)

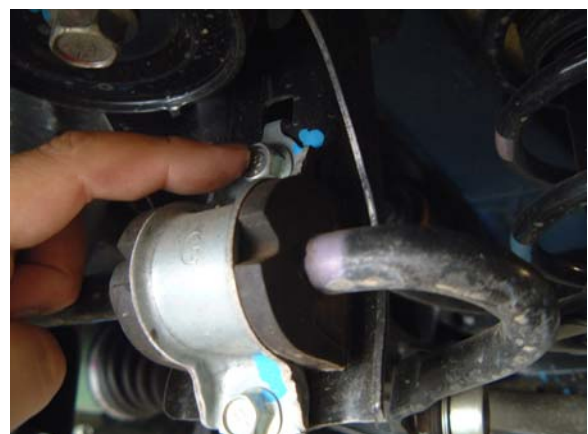

(Figure 2)

3. Fasten the reinforcement plate to the sub-frame using the 10mm hardware provided (Figure 3). Hand tighten at this time, (this will be torqued to 40ft/lbs in Step 6).




(Figure 3)

4. Locate the OE replacement polyurethane bushings and tube of special grease supplied in the hardware kit. Cut the end off the grease tube and apply the grease to the bore of the polyurethane bushings (in the hole). Open the bushings and snap them over the new anti-sway bar, as positioned on the stock bar.
5. With a pair of pliers gently bend the tab of the OEM bushing bracket so that it is 90 degrees (Figure 4). This will allow the bracket to fit on top of the reinforcement plate. Place the OE brackets over the pivot bushings.



(Figure 4)

6. Place the tab through the hole on the reinforcement plates and install the 4 OEM bolts that mount the bushing bracket (Figure 5). Install the bar to end links. **Tighten bushing bracket bolts to 22ft/lbs. Tighten end link nuts 28ft/lbs. Tighten 10mm hardware (in top hole) to 40 ft/lbs.**

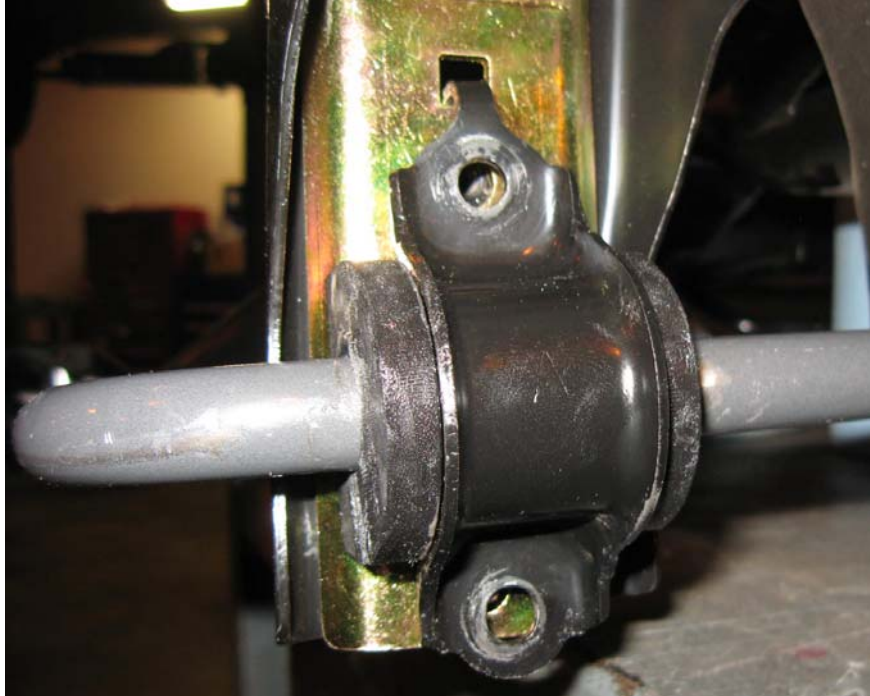

**IMPORTANT NOTE ABOUT ADJUSTABLE SETTINGS:**

We strongly suggest that your technician initially sets the end links in the softest setting. The softest setting will be the setting with the end links closest to the end or tip of the sway bar, furthest from the mounting bushings.

After installing the sway bar, we suggest that you drive the car carefully and within your abilities, noticing the changes in the handling characteristics. If driving in poor weather, exercise additional care during cornering and braking until you are familiar with the handling.

If you chose to use the firmer settings, again remember to drive the vehicle carefully, and take note of the changes you have made to the suspension. You will notice a handling difference with each sway bar settings.

7. Installation is complete. Check that all hardware has been tightened per specifications. Check assembly periodically for tightness.

**Thank you for choosing Progress products.**  
**For additional product and technical information, visit our website at**  
[www.progressauto.com](http://www.progressauto.com)